
CAE PERFORMANCE PRODUCTS PTY/LTD

Pyrenees Hwy Chewton, VIC. 3450 Telephone : (03) 5472 1442 - Fax (03) 5472 4111

Wiper Kit Component List

Wiper Motor Assembly Wiring Loom, Switch and In Line Fuse. Customer Instruction Sheet

Fitting Instructions


EH, EJ Holden 2 Speed Wiper Motor

- 1 Remove cowl grille so you can unclip the wiper actuation arm from the crank drive then remove original motor assembly. It may be necessary to run ¼"unc tap thru the original (3) mounting holes.
- 2 Fit new 2 Speed Wiper motor feeding the new crank up thru the slot in the cowl and then position the wiper into its three hole mountings. Wiper sits parallel pointing to the driver's side.
- 3 Fit 2-speed switch in appropriate hole and install wiring loom supplied. (Note original wiring and switch is not compatible with this wiper motor kit)
- 4 Connect Brown wire to suitable earth location on the vehicle
- 5 Connect Red feed wire through Fuse supplied to suitable Ignition Feed Wire on Ignition Switch of vehicle. Activate the wiper motor and switch to the park position. (This will preset the self-park position of the wiper crankshaft ready for wiper link connections.)
- 6 Fit the brass bush to the original actuation arm and connect to the wiper crank pin, fit the copper washer on top of the arm followed by fitting the E Clip retainer. In some vehicles it is necessary to slightly bend the original actuation arm to allow it be rotated freely.
- Activate power and check wiper for dash and body clearance. It is recommended you connect the red wire to a slave battery so you can check that the actuation arm is not interfering with anything inside the cowl. Do this by just touching the red wire to the power source on and off so you can clearly see if there is clearance every where during the 360 degree rotation of the wiper crank mechanism. If it is necessary to adjust the park rotation position, undo the crank nut and gently rotate the crank until the blade arms are at the correct park position on the windscreen, and then retighten the crank nut.
- 8 Activate motor and self-park motor with switch and fit and adjust the wiper blades in the park position on the windscreen. Check windscreen sweep and adjust blades if necessary.

CAE PERFORMANCE PRODUCTS PTY/LTD

Pyrenees Hwy Chewton, VIC. 3450 Telephone : (03) 5472 1442 - Fax (03) 5472 4111

WIPER MOTOR LOOM PINOUTS

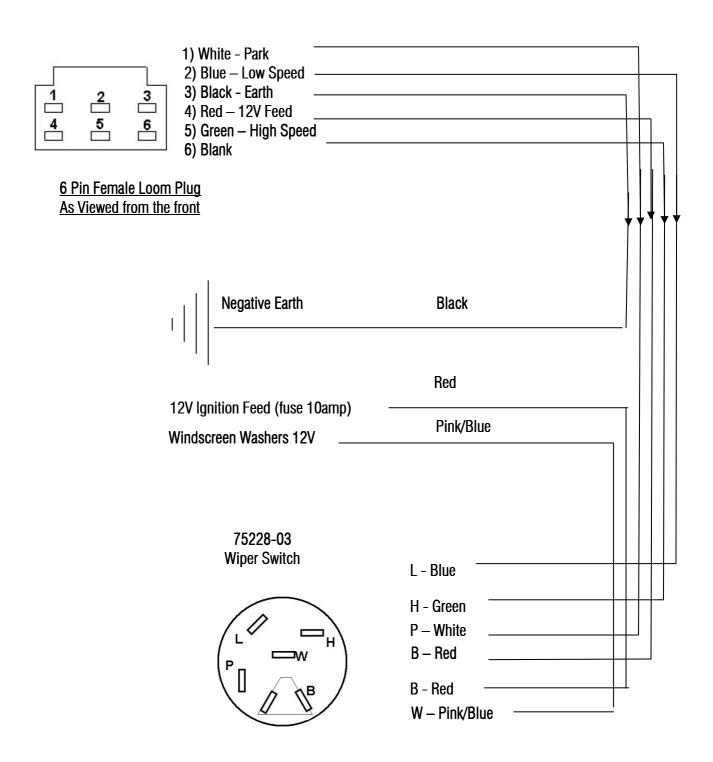

CAE PERFORMANCE PRODUCTS PTY/LTD

Pyrenees Hwy Chewton, VIC. 3450 Telephone : (03) 5472 1442 - Fax (03) 5472 4111

